

# HEXAGON S


---

## MOUNTING INSTRUCTION

---

### PLEASE READ CAREFULLY


The assembly should be carried out by a qualified person, due to the fact that wrong assembly can lead to that the wardrobe falls resulting in personal injury or damage. First check, if the wall is suitable for drilling and mounting.

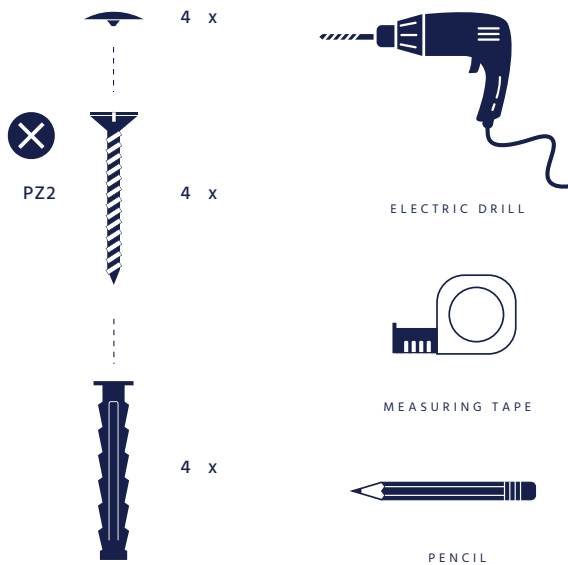


### STEP 1

Place the wardrobe to the wall on the height desired and mark the holes with a pencil.

### STEP 2

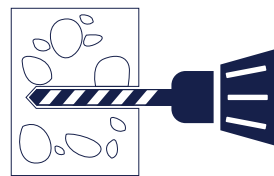


### STEP 3

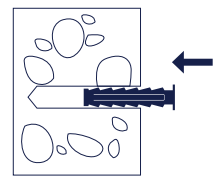

Drill 4 holes into the wall with the drill head with a size of 8mm. Place the pegs provided into the holes.

### STEP 4

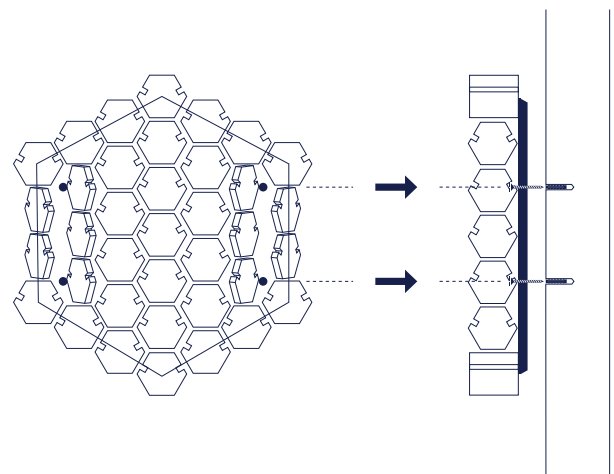

Flip the blocks and place the wardrobe on the wall. Drill the 4 screws provided through the panel into the holes. Mount the white screwcaps on each screw.